

	Pre-clean	Post-clean	Post-ozone
Bedside Table	40	29	2

	Pre-clean	Post-clean	Post-ozone
Bedside Chair	26	15	2

	Pre-clean	Post-clean	Post-ozone
Under the Bed	77	74	2

	Pre-clean	Post-clean	Post-ozone
Top of the Mattress	18	11	2

	Pre-clean	Post-clean	Post-ozone
Next to Bed	75	83	6

All figures are TVC per 25cm<sup>2</sup>.

# The force of nature for **infection control**...

The following data was obtained from trials conducted in the Queen Elizabeth hospital in Birmingham. Four rooms in a 12 room Oncology ward were subjected to regular Meditrox cleanings over a period of several months. Controlled swab tests show dramatic reduction in infectious agents in all sample areas.

With regular use of the Meditrox 100 these levels can be maintained and further improved upon.

And all in under one hour.

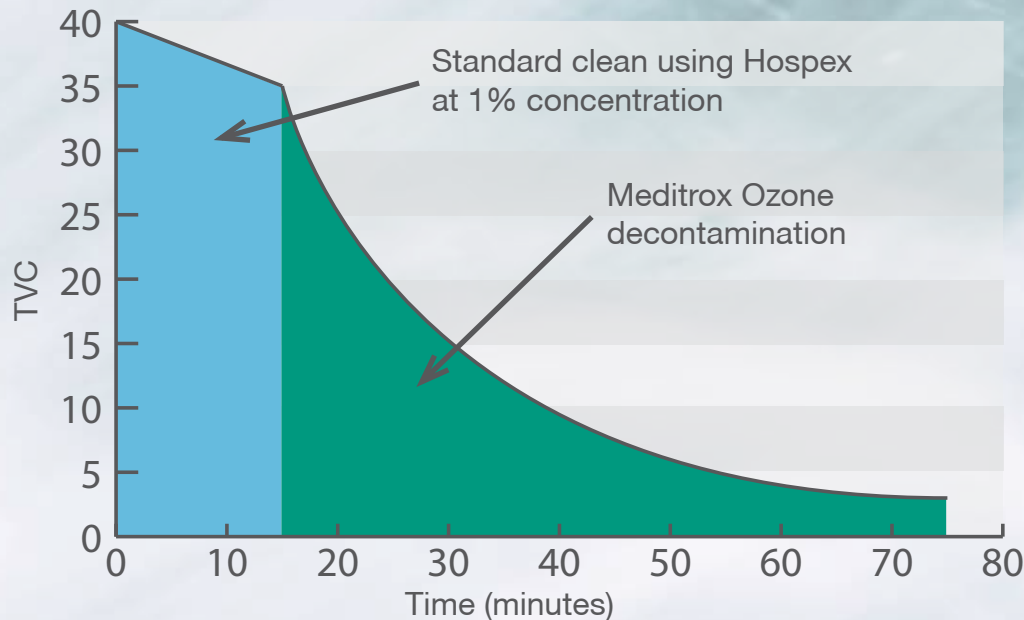


Table: Numbers of observations and TVC/25cm<sup>2</sup> by location.

	Pre-cleaning		Post-cleaning		Post-Meditrox	
	N	Mean	N	Mean	N	Mean
Bedside Chair	20	26	20	15	20	2
Bedside Table	20	40	20	29	20	2
Floor next to Bed	20	75	20	83	20	6
Floor under Bed	20	77	20	74	20	6
Mattress Top	20	18	20	11	20	2
All locations	100	40	100	31	100	3

Data are number of observations (N) and geometric means.

